

L I F E W A T C H

WITH
BODY TEMP
TRACKER



Main Features

Waterproof
case




Power
button

LED
flashlight


Soft
strap

Watch Back

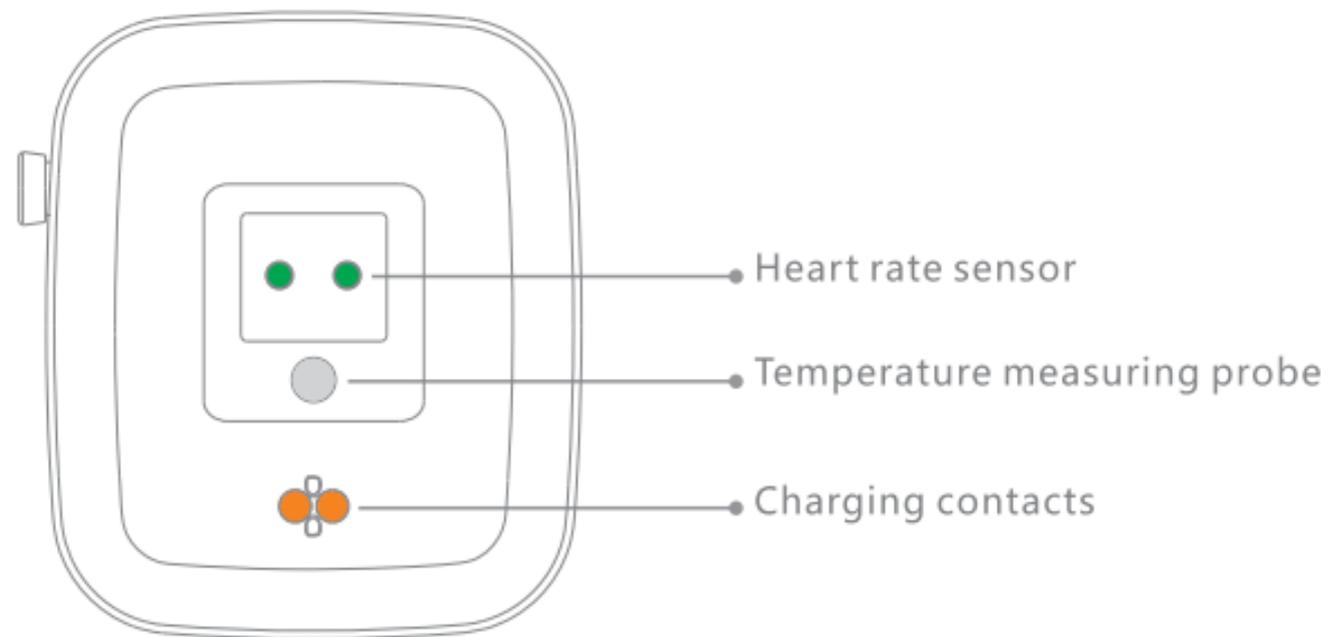

1. Charge Your Watch

Connect the charging cord to the magnetic contacts and charge for 3 hours. The Life Watch will operate for 5 to 7 days on a full charge depending on usage. Press the power button for 5 seconds to turn it on. Press and hold to turn it off.

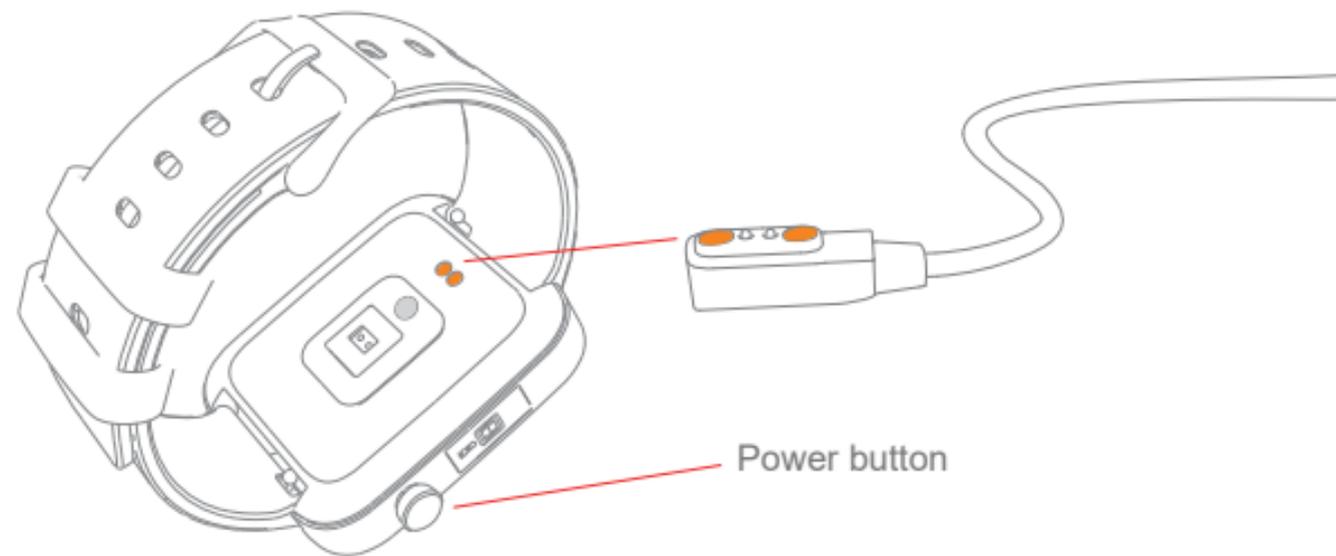

2. Download the App

Go to the App Store or Google Play and search for the FitCloudPro App. Download it to your iPhone or Android smartphone. Follow the onscreen prompts and select "OK" to allow the app to connect your smartphone via Bluetooth.



FitCloudPro


You can also scan the QR code to take you to the FitCloudPro App on the store appropriate for your smartphone. Compatible with iOS8.4 and above, Android 4.4 and above. Follow the app's screens to configure FitCloudPro with the Life Watch.

3. Set Up

First time users select "Join Us" and then register on the Enroll screen with an email address and password. Select "Enroll Now". Complete the User Profile on the next screen and select "Next Step". Add your daily steps goal and select "Complete".

Pairing your Watch

After selecting "Complete" the next screen, "Bind Bracelet" appears. Select "Search Now" and look for "Life Watch" on the list that appears as shown on right and select it. The Bluetooth Pairing Request screen appears. Select "Pair" and "Ok" to accept notifications. Then select "Enjoy Now". Your Life Watch is now linked to FitCloudPro.

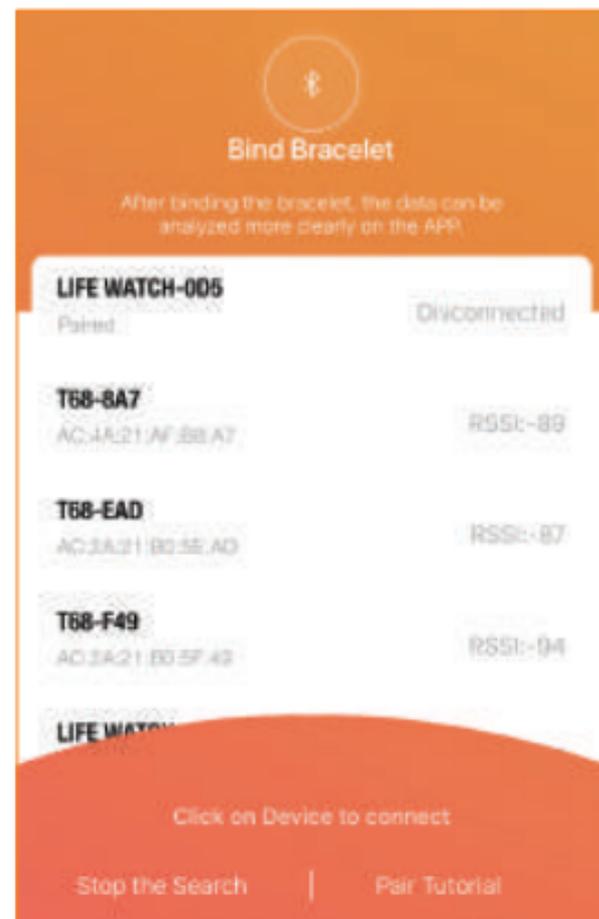

4. Main Screen


Choose your main screen from 6 designs below. Press and hold your finger on the main screen until it shrinks in size. Swipe right to select your screen and tap on it once.



Skin temperature:
Real-time skin temperature in action.




Body temperature:
Body temperature at rest.

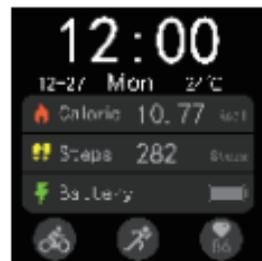

Special precautions when measuring body temperature:

1. Please **wear the watch for 5 minutes** before taking the first measurement.
2. Measure the body temperature under ambient temperature of **65-85 degrees F** to ensure accuracy.

5. Screen Navigation

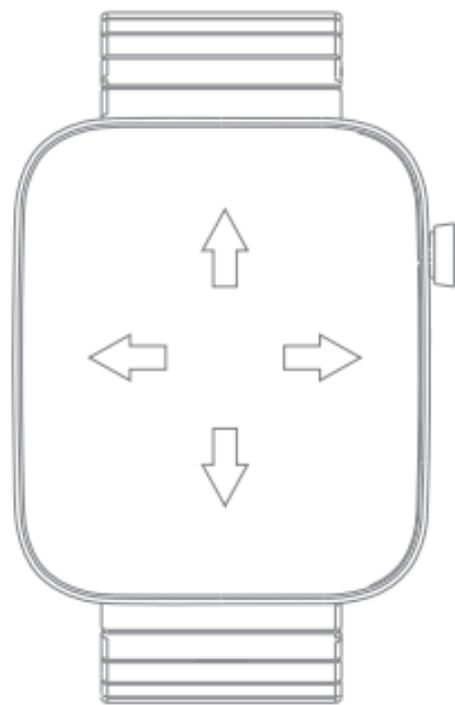

Power Button: Press and hold for 5 seconds to power on/off
Press quickly to turn on to access the following navigation controls:

Swipe left: Go to the next menu screen

Swipe right: Go to a quick menu list from the main screen or
Go to the previous menu from any menu screen.

Swipe up: Go to call and text notifications from main screen.

Swipe down: Access LED Flashlight, Screen Brightness,
Find your Phone, and Body Temperature.



Press this icon once to access the Flashlight after swiping down from the main screen.

6. Configuring your watch

Swipe left to the last menu and select, "Settings" to configure the following options:



Language: Select your preference from these options: English, Spanish, Chinese, German, Italian, Russian, Japanese, Portuguese, Polish, and French.

Screen Display: Choose the main screen design, brightness level and the screen time before the watch goes on standby.

Time Settings: Set the date and time.

Time Format: Select 12-hour or 24-hour time formats.

Configuring your watch



Distance Format: Select Miles or Kilometers.

Vibration Intensity: Choose between three levels of vibration for all notifications.

System: Includes the following submenus:

- About menu: shows the watch's Bluetooth network identification name, Mac address and software version.
- Shutdown options
- Reset options

Product Specifications

Chipset: RTK8762C

Display: 1.54"IPS colour screen

Resolution: 240*240dpi

Waterproof level:IP67

Strap material: TPU

Sensor: STK8321

Heart rate chip: HX3300

Battery: 250mAh

Working time: 5-7 days

Bluetooth: 5.0

Operating Temperature: 14°F~120°F

System: iOS8.4, Android4.4 and above

Precautions

1. Lifewatch is not a medical device and is not intended to diagnose, treat, cure, or prevent any disease. Contact your health-care provider if you suspect you have a medical problem.
2. Do not use chemicals for cleaning. Use regular tap water and a soft cloth to clean.
3. Keep the watch away from strong magnetic fields and electrical equipment.
4. Please avoid direct heat from any appliances. Temperature should not exceed 110°.
5. Do not disassemble, repair or modify the watch yourself.
6. Dispose of packaging and recycle it in approved recepticals.
7. Do not wear when bathing to avoid damaging sensitive contacts on the watch back.
8. Do not hit the Life Watch face with sharp or hard objects.
9. The watch can be used without the app. It is recommended to enjoy all of it's features.

PRODUCT SERVICE AND SUPPORT

STOP!! IMPORTANT!!

PLEASE DO NOT RETURN THIS ITEM TO THE STORE

PLEASE CALL US AT **973-531-4421** OR CONTACT US VIA E-MAIL AT:

CUSTOMERSERVICE@INVENTEL.TV

PLEASE READ MANUAL FULLY BEFORE USE!

100% SATISFACTION GUARANTEE

IF FOR ANY REASON YOU ARE NOT 100% SATISFIED WITH YOUR PURCHASE PLEASE CONTACT US.
WE WILL BE HAPPY TO ASSIST YOU.



www.GetLifeWatch.com



Distributed by InvenTel Products, LLC

200 Forge Way, Suite 1

Rockaway, NJ 07866

AS SEEN ON



InvenTel Products reserves the right to provide you with the newest product available to date.
Engineering enhancements are ongoing and may not be reflected in the pictures and specifications on this package.

© 2020 InvenTel Products, LLC.